



LIVE THE BRAAI LIFE

COMMANDER 3 & 4

MODEL No: 1195-31 & 1195-43



MODEL 1195-31



MODEL 1195-43




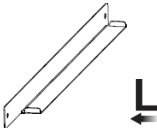
















1002-161/1-RSA-17-A











ASSEMBLY INSTRUCTIONS

NOTE! PRODUCT MAY VARY FROM ILLUSTRATIONS













503-0758 LEV3

BOX CONTENTS

1	 BOTTOM PANEL	1195-43 x 1	10	 DRIP TRAY BRACKET	1195-43 x 1 1195-31 x 1
2	 BOTTOM PANEL	1195-31 x 1	11	 WHEEL AXEL	1195-43 x 1 1195-31 x 1
3	 LEFT LEG	1195-43 x 2 1195-31 x 2	12	 WHEEL	1195-43 x 2 1195-31 x 2
4	 RIGHT LEG	1195-43 x 2 1195-31 x 2	13	 BURNER BOX	1195-43 x 1
5	 FRONT PANEL	1195-43 x 2	14	 BURNER BOX	1195-31 x 1
6	 FRONT PANEL	1195-31 x 2	15	 LEFT TABLE	1195-43 x 1 1195-31 x 1
7	 FLAME TAMER	1195-43 x 4 1195-31 x 3	16	 RIGHT SB TABLE	1195-43 x 1
8	 GRID	1195-43 x 2	17	 RIGHT TABLE	1195-31 x 1
9	 DRIP TRAY BRACKET	1195-43 x 1 1195-31 x 1	18	 CONTROL BASE	1195-43 x 1


19	 CONTROL KNOB	1195-43 x 5 1195-31 x 3	24	 WARMING RACK	1195-43 x 1
20	 SIDE BURNER	1195-43 x 1	25	 WARMING RACK	1195-31 x 1
21	 SB BRACKET	1195-43 x 1	26	 DRIP TRAY	1195-43 x 1
22	 SB POT STAND	1195-43 x 1	27	 DRIP TRAY	1195-31 x 1
23	 GRID	1195-31 x 2	28	 DRIP CUP	1195-43 x 1 1195-31 x 1

HARDWARE

<div><div>A</div><div>1195-43 & 1195-31</div></div> <div><div>M6 NUT QTY: 1</div></div> <div><div>AXEL WASHER QTY: 1</div></div> <div><div>AXEL MAT QTY: 1</div></div> <div><div>SMALL SPANNER QTY: 1</div></div>
<div><div>B</div><div>1195-43 & 1195-31</div></div> <div><div>M6 x 12 SCREW QTY: 16</div></div> <div><div>M6 LOCK WASHER QTY: 16</div></div> <div><div><div>D</div><div>1195-31 ONLY</div></div><div><div>M6 x 16 SCREW QTY: 8</div></div><div><div>M6 LOCK WASHER QTY: 8</div></div></div>
<div><div>C</div><div>1195-43 & 1195-31</div></div> <div><div>M4 x 8 SCREW QTY: 10 (1195-43) QTY: 4 (1195-31)</div></div> <div><div>M4 LOCK WASHER QTY: 10 (1195-43) QTY: 0 (1195-31)</div></div> <div><div><div>E</div><div>1195-43 ONLY</div></div><div><div>M6 x 16 SCREW QTY: 8</div></div><div><div>M6 LOCK WASHER QTY: 8</div></div></div>


Step 1

- Start by fastening the legs (Items 3 & 4) to the bottom panel (Item 1 for 1195-43 and Item 2 for 1195-31) using x2 M6x12 screws and M6 lock washers (Item B) as shown below.

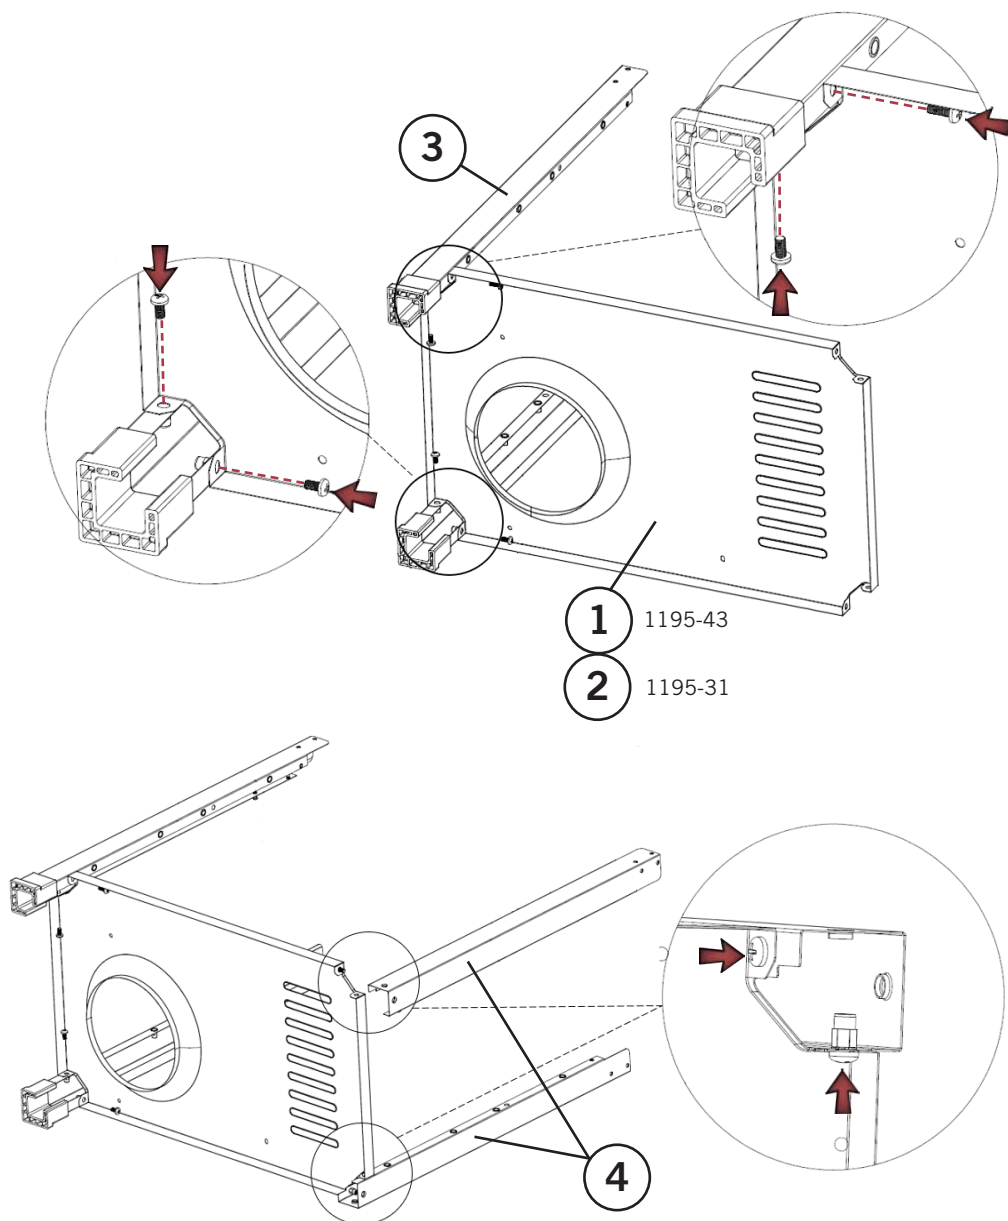


Step 2


- Insert x8 M6x12 screws with M6 lock washers (Item B) into the pre drilled holes in the lower and upper part of the left and right front legs. Do not tighten screws. Line up the slots in the front panel (Item 5 for 1195-43 and Item 6 for 1195-31) with the screws. Slide each front panel into place. Tighten the screws.

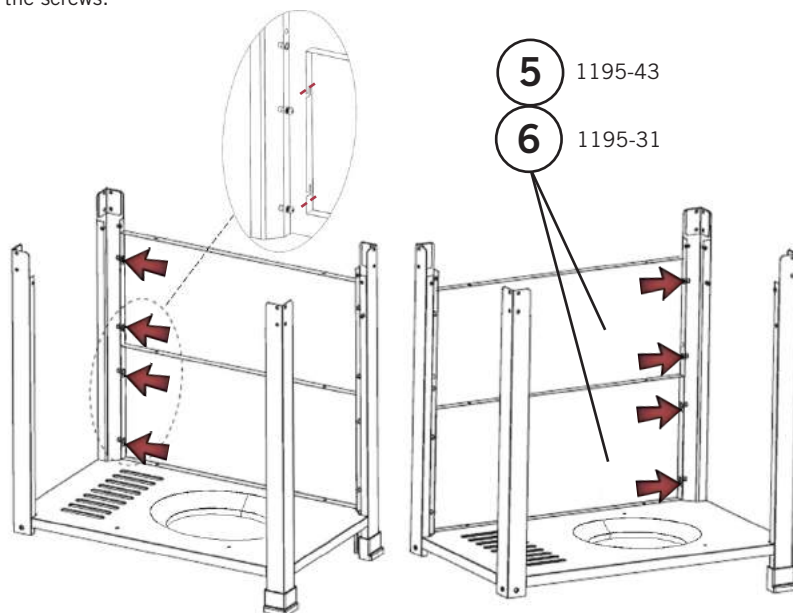

Step 3


- Insert the axel (Item 11) into one wheel (Item 12) and then the axel mat. Next insert the axel into the pre drilled hole located on the right front leg. The axel will then insert into the co-ordinating hole located on the right back leg. Insert the second wheel onto the axel on the the right back leg. Insert the axel washer on the axel and secure with the M6 lock nut using the spanner supplied (Item A).

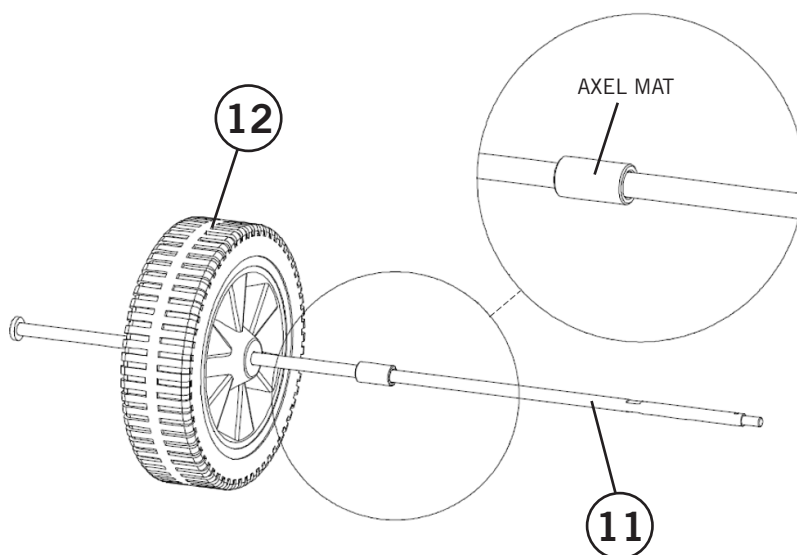

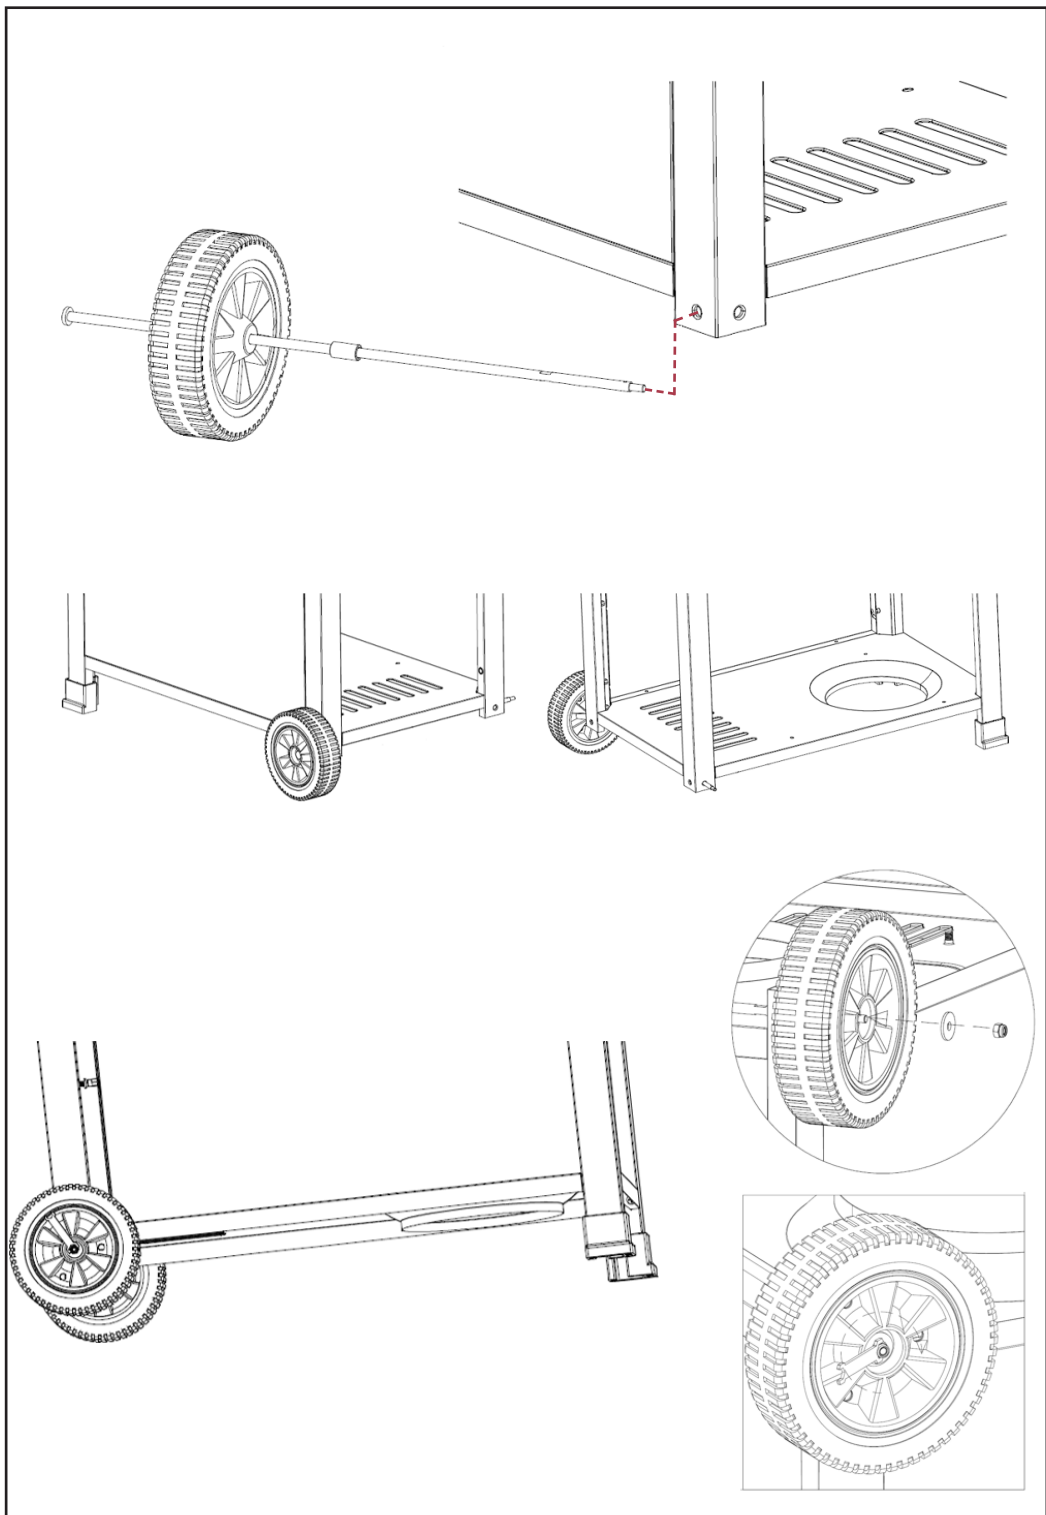

Step 4


- Fasten the left and right drip tray brackets (Item 9 & 10) to the left legs and right legs using x4 M4x8 screws (Item C)

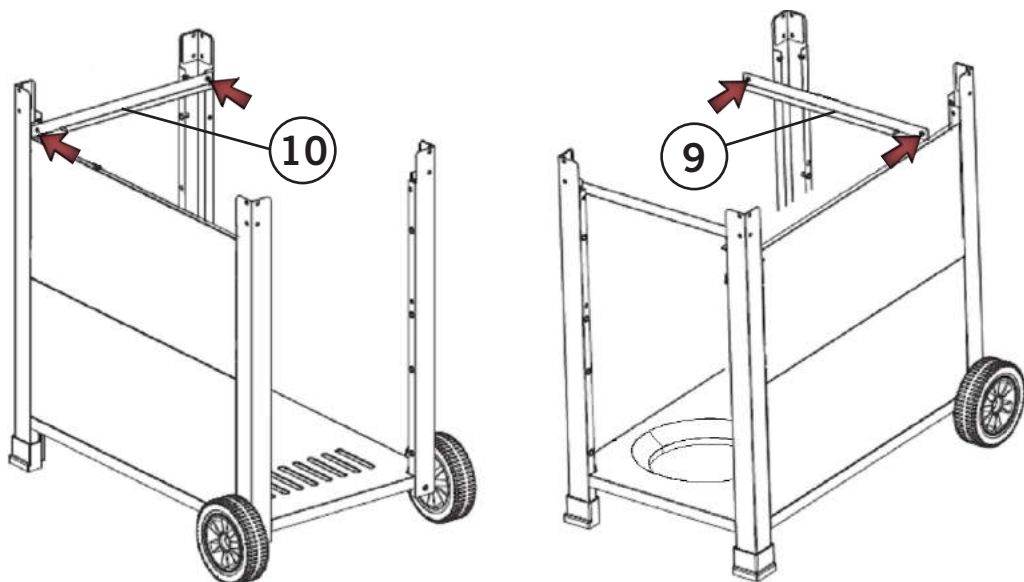


Step 5

- Slot the burner box (Item 13 for 1195-43 and Item 14 for 1195-31) onto the trolley and fasten down using x8 M6x16 screws and M6 washers (Item E for 1195-43 and Item D for 1195-31). Put the control knobs (Item 19) on.


Model 1195-43

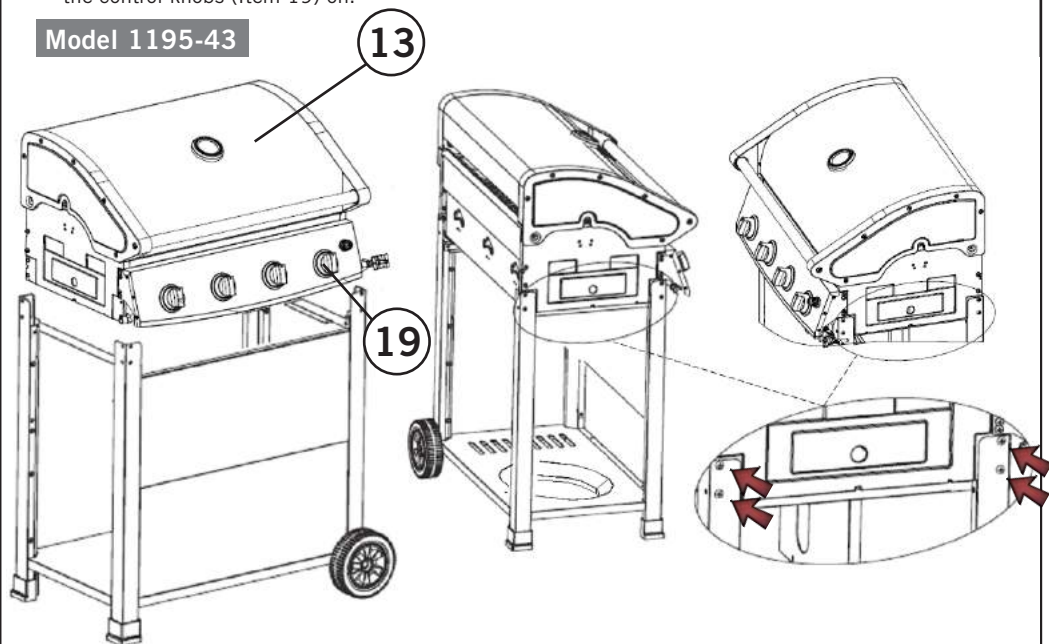

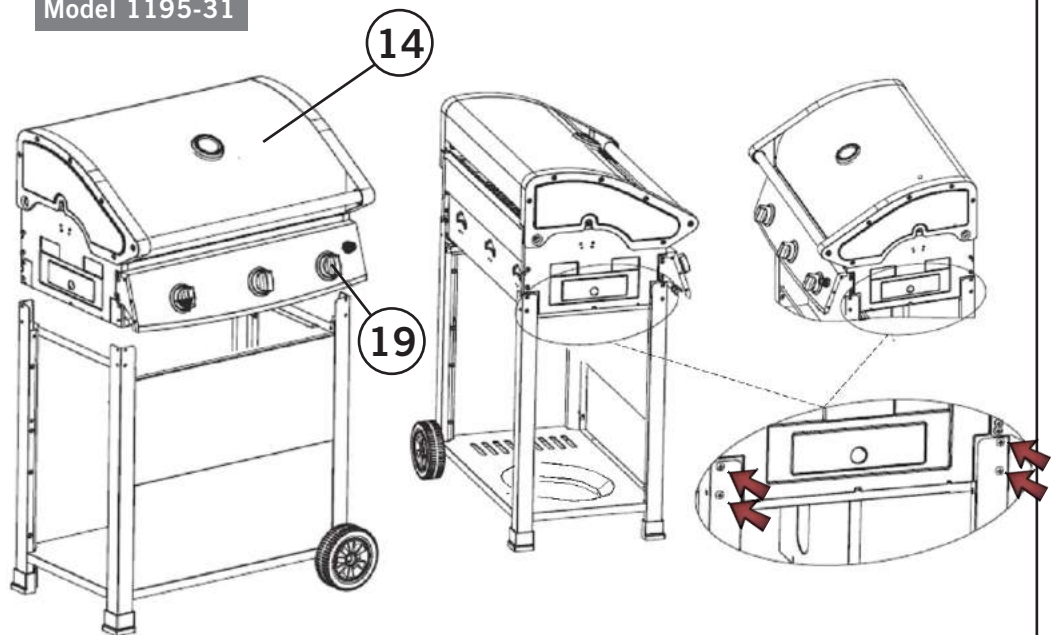

Step 6


- Line up the holes to fasten the left side table (Item 15) with the pre-installed screws (x6) on the left side of the burner box. Slide the left side table into place over the screws and then tighten the screws to secure the side table.

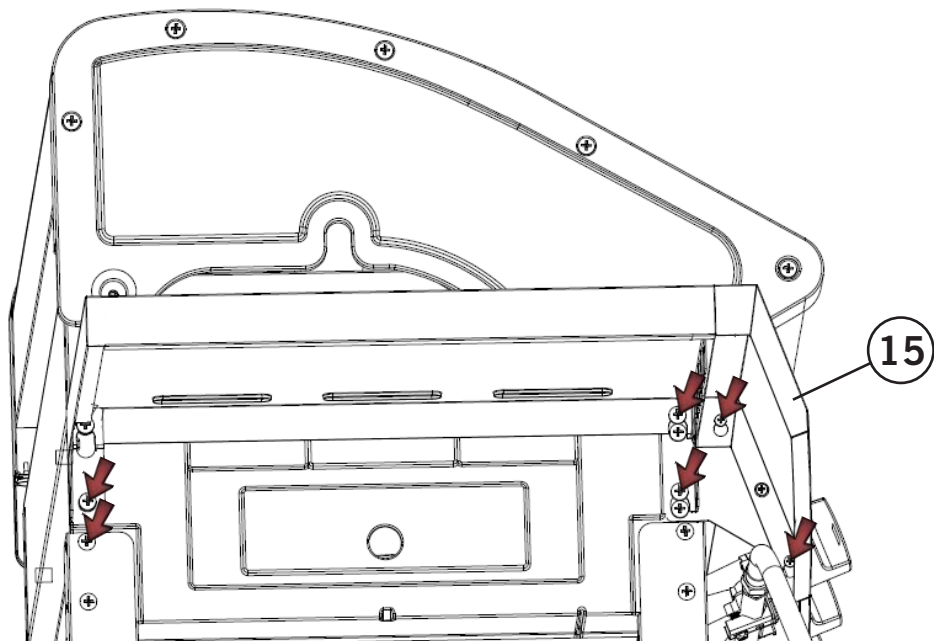


Step 7

- Line up the holes to fasten the right side table (Item 17) for model 1195-31 and the right side burner table (Item 16) for model 1195-43 with the pre-installed screws (x6) on the right side of the burner box. Slide the right side table/side burner table into place over the screws and then tighten the screws to secure the side table.




Model 1195-31

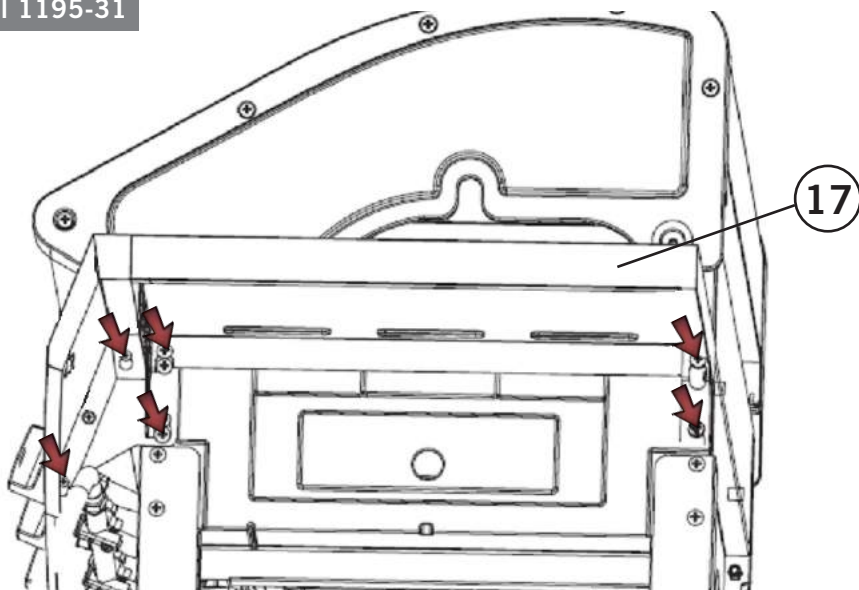


Model 1195-43

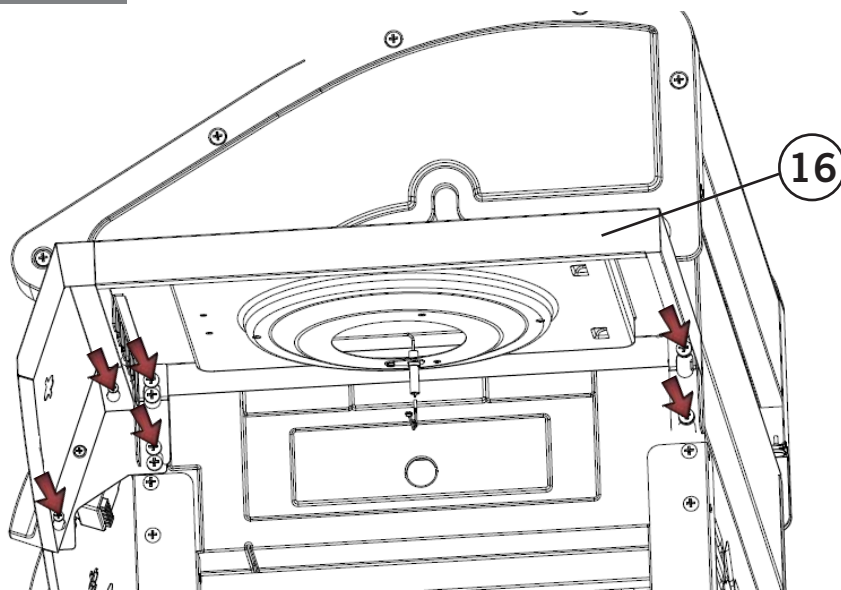



- Fasten control knob base (Item 18) to the side burner table using x2 M4x8 screws (Item C).

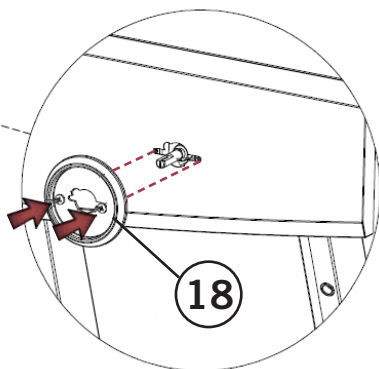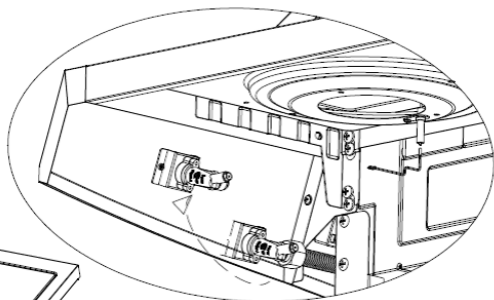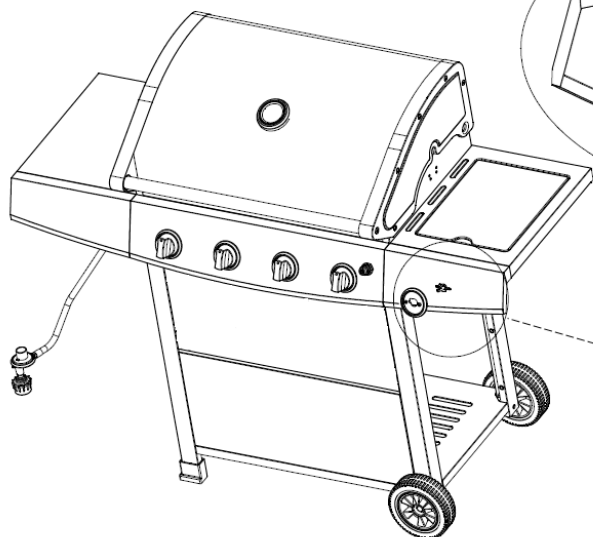


- Install and fasten the side burner (Item 20) into the side burner table using x2 M4x8 screws (Item C) as shown.

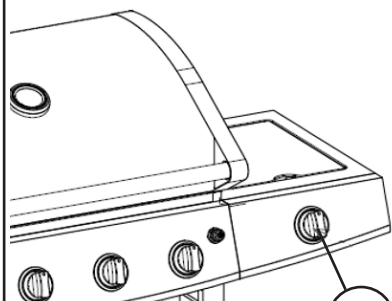


19

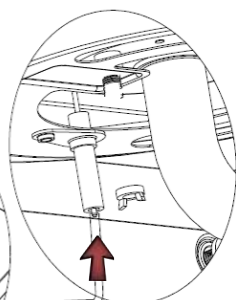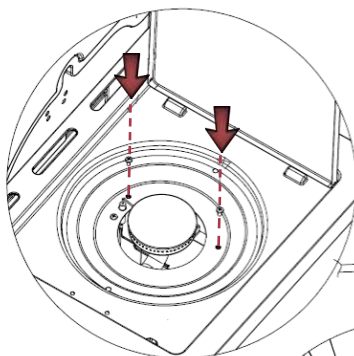

Connect the piezo ignition cable to the piezo ignition unit.

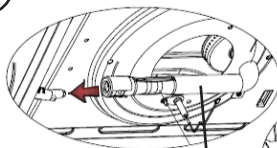



20

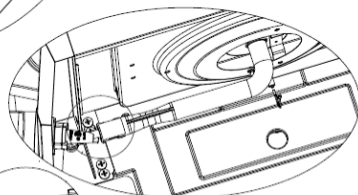

Ensure that the side burner end is properly located over the end of the side burner valve.



Fasten the side burner bracket (Item 21) to the side burner table using x2 M4x8 screws (Item C) as shown.

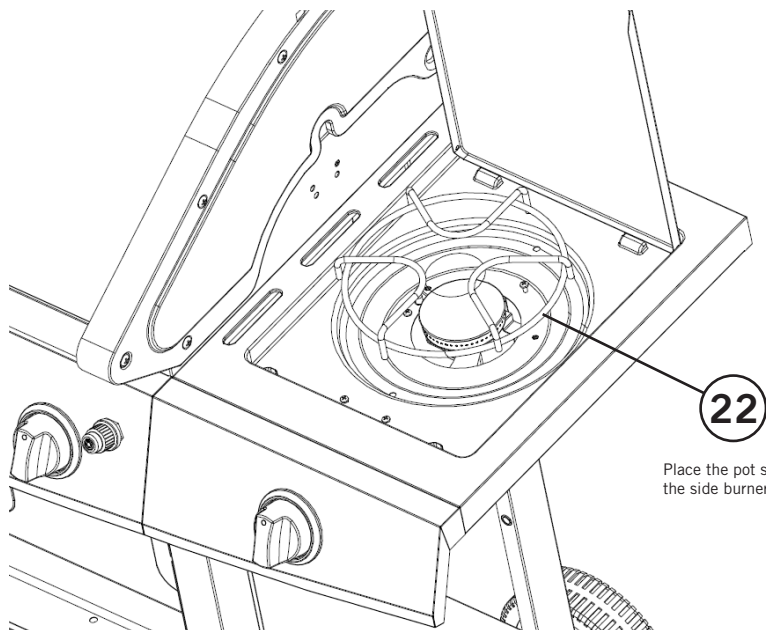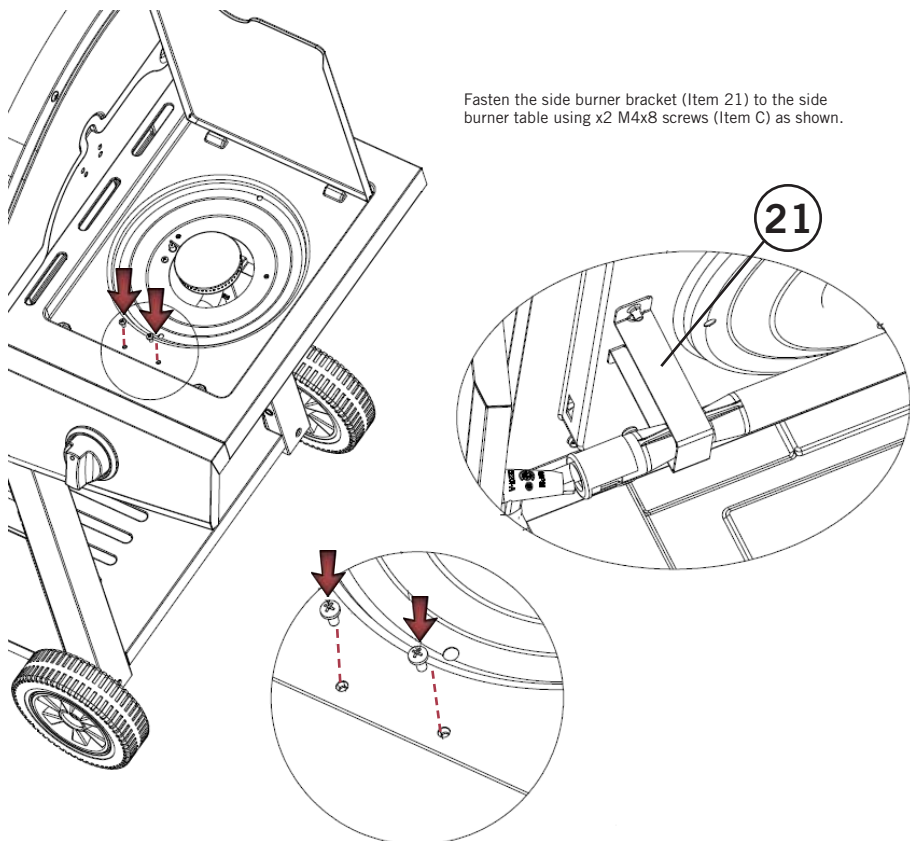


Place the pot stand in the side burner table.


Step 8

- Place 4 flame tamers (Item 7) for model 1195-43 and 3 flame tamer (Item 7) for model 1195-31.

Model 1195-43

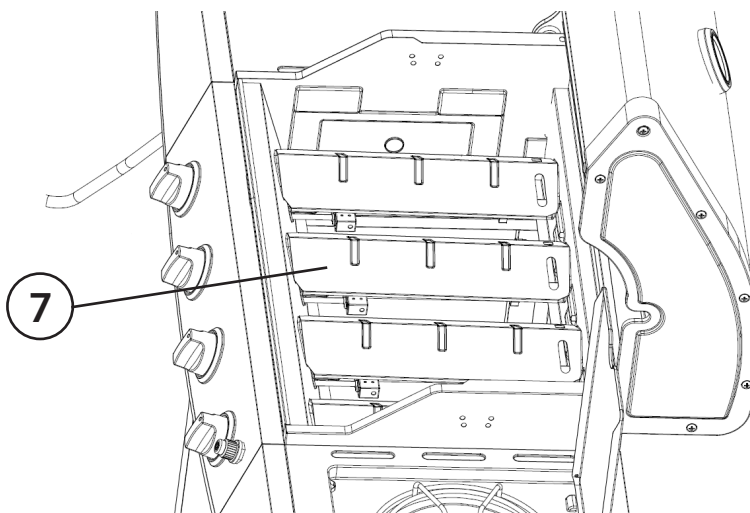


Model 1195-31

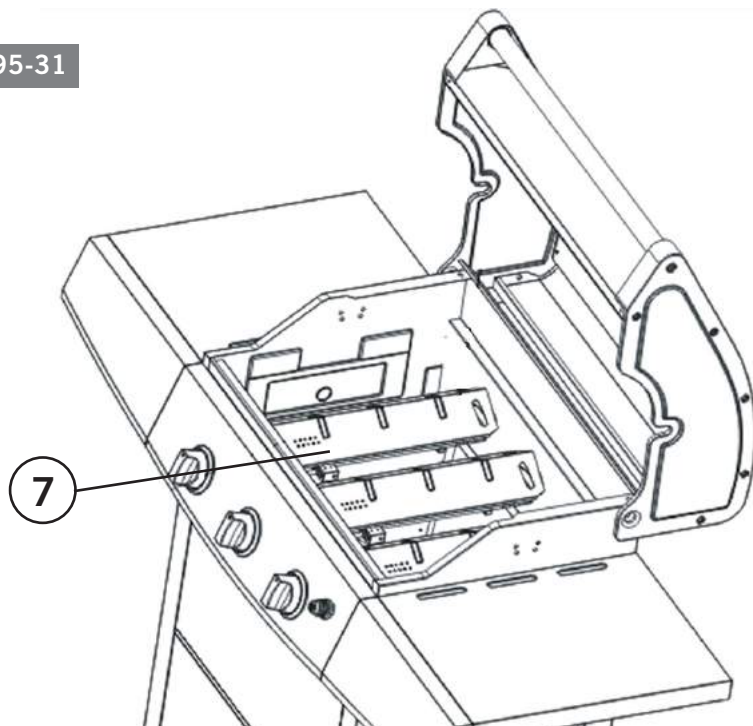


Step 9

- Place the grids (Item 8 for model 1195-43 and Item 22 for model 1195-31) into the burner box as shown.

Model 1195-43

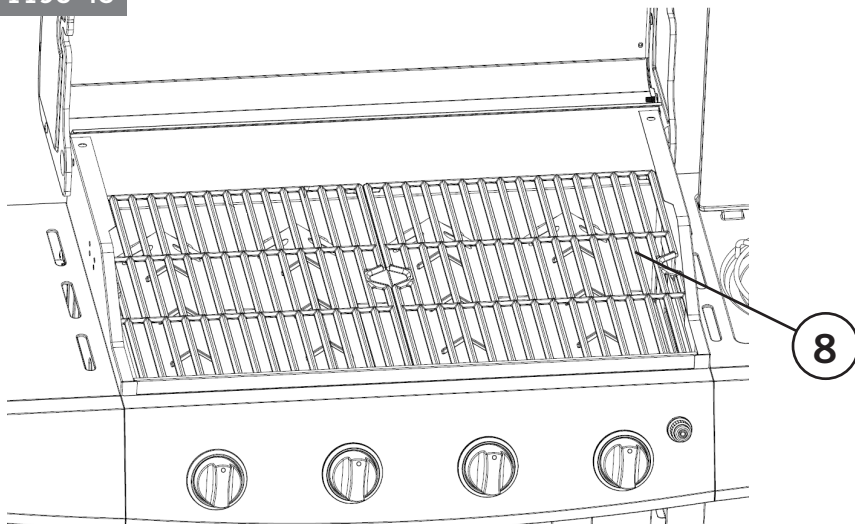


Model 1195-31

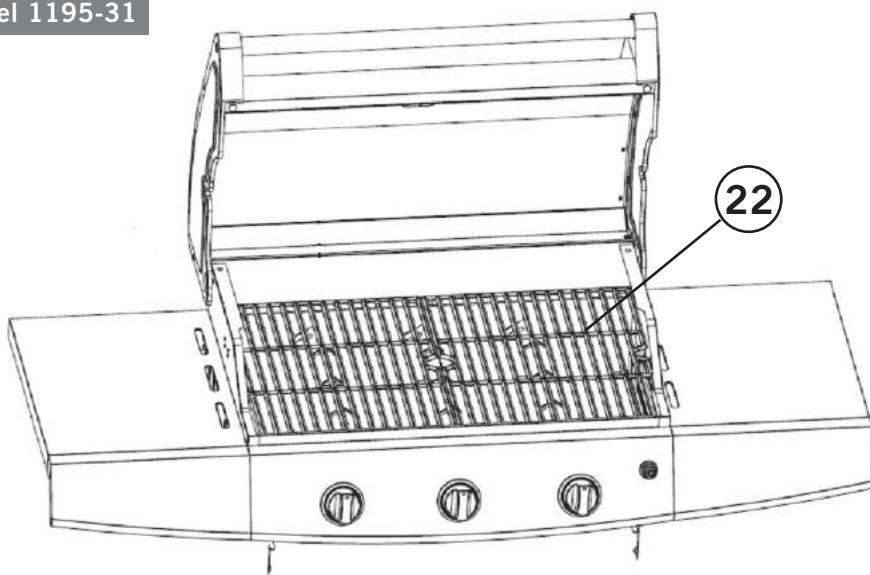


Step 10

- Place the warming rack (Item 24 for model 1195-43 and Item 25 for model 1195-31) into the burner box as shown.

Model 1195-43

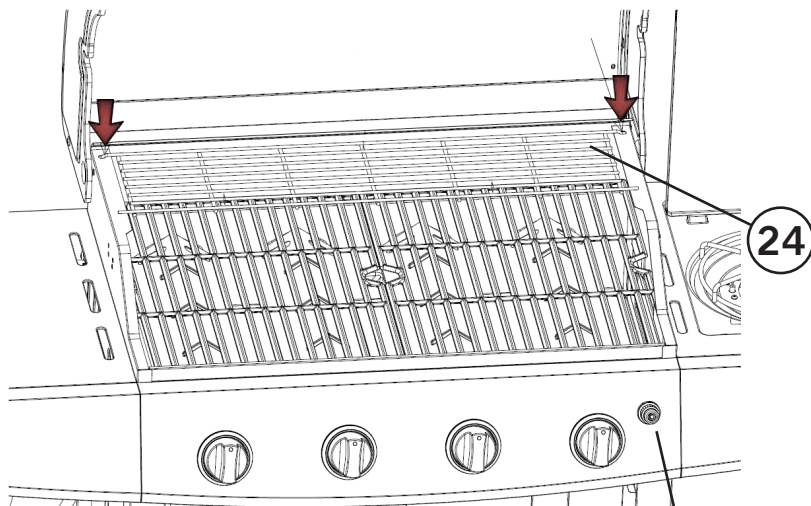


Model 1195-31

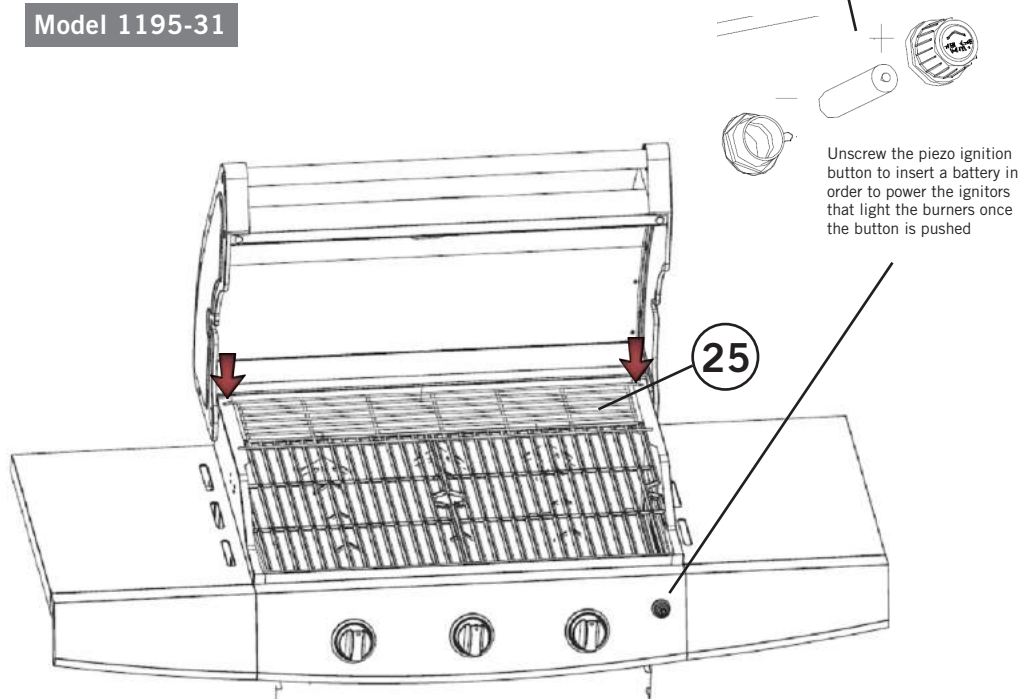


Step 11

- Insert the drip tray (Item 26 for model 1195-43 and Item 27 for model 1195-31) into the back of the burner box and then place the drip cup (Item 28) into the space provided underneath the drip tray.

Model 1195-43

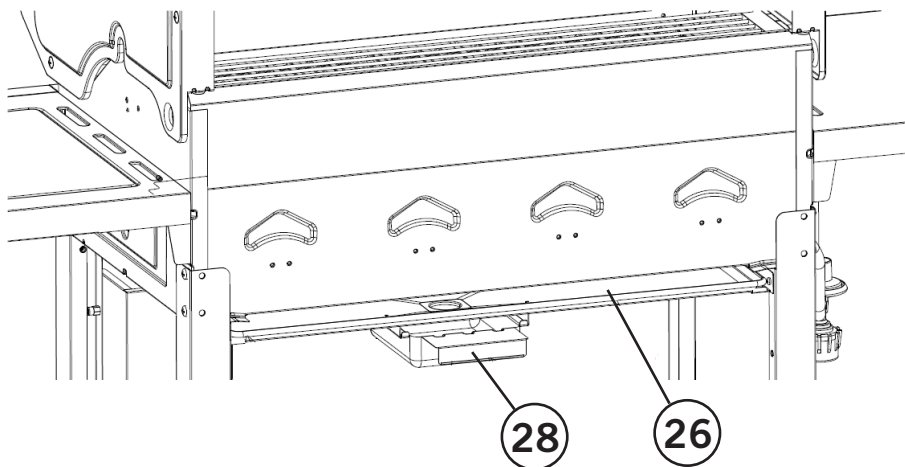

Model 1195-31

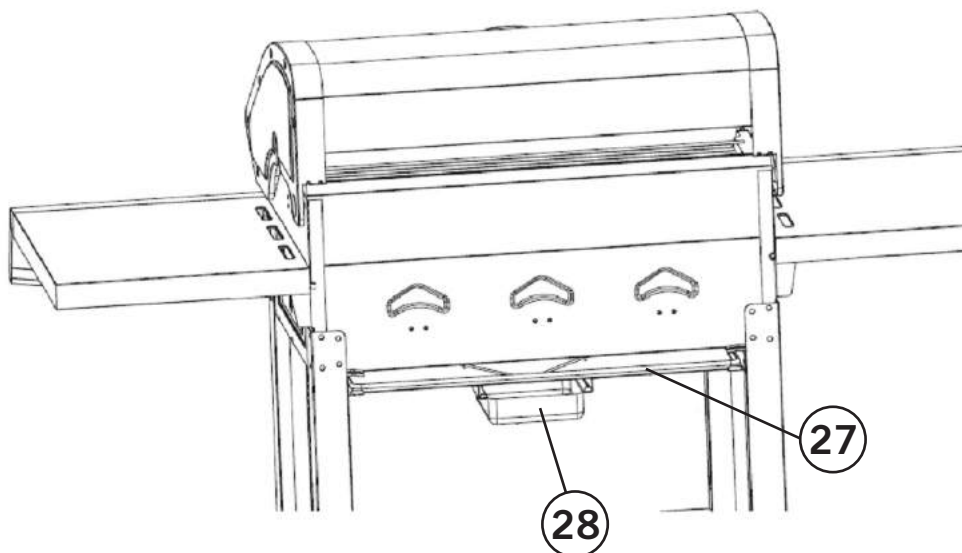

Your product is now ready for use. You can now connect the regulator to the gas cylinder. Do a gas leak test before operation. This needs to be done every time you use your product as a safety precaution. Please refer to the user manual for the steps on how to perform a leak test.